






UC 148 A/Z

PRODUCT DESCRIPTION SHEET




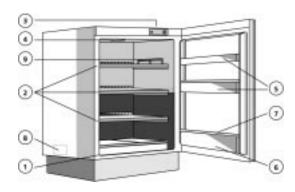


A. Refrigerator compartment

- 1. Crisper drawer
- 2. Shelves / Shelf area
- 3. Thermostat
- 4. Light
- **5.** Door trays
- 6. Bottle rack
- 7. Removable bottle restraint
- **8.** Rating plate (at the side of crisper drawer)
- 9. Ice cube tray
- **10.** Low Temperature compartment door



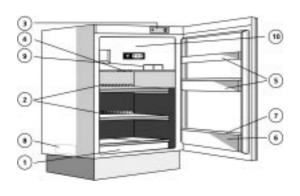


B. Low temperature compartment if supplied



Notes: The number of shelves and type of accessories may vary, depending on the model. All shelves, door trays and racks are removable.

Important: Refrigerator accessories must not be washed in a dishwasher.
















UC 148 A/Z

Controls

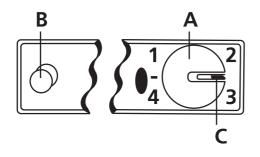

- A. Thermostat knob
- B. Light switch
- **C.** Thermostat control reference


Thermostat set to ●: no refrigeration, no light.

Thermostat set to 1: least cold internal temperature.

Thermostat set to 4: coldest internal temperature.

The average recommended thermostat setting is 2-3.

Removing the light diffuser

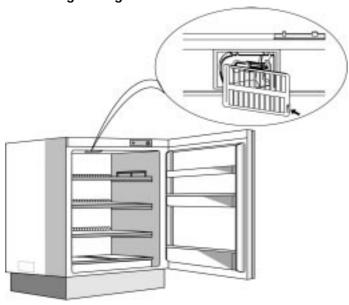

- 1. Push the tab towards the left
- 2. Remove the cover

Printed in Italy **Q**11/03











